


# Product data sheet

✉ [sales@brannan.co.uk](mailto:sales@brannan.co.uk)

☎ +44 (0)1946 816600

🌐 [brannan.co.uk](http://brannan.co.uk)

## COMPACT PSYCHROMETER

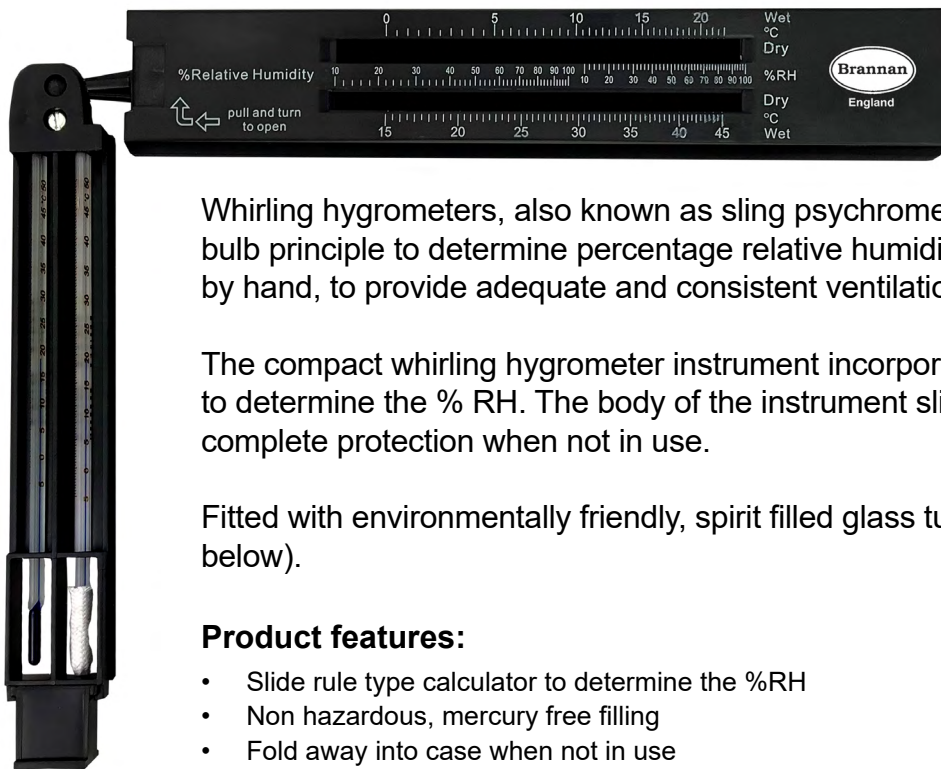

Whirling hygrometers, also known as sling psychrometers, employ the “wet” and “dry” bulb principle to determine percentage relative humidity. They are designed to be rotated, by hand, to provide adequate and consistent ventilation of the bulbs.

The compact whirling hygrometer instrument incorporates a ‘slide rule’ type calculator to determine the % RH. The body of the instrument slides away into the handle providing complete protection when not in use.

Fitted with environmentally friendly, spirit filled glass tubes. Refill tubes available (see below).

### Product features:

- Slide rule type calculator to determine the %RH
- Non hazardous, mercury free filling
- Fold away into case when not in use
- Supplied with full instructions

### Product specifications:

<b>Temperature range:</b>	-5 to +50°C
<b>Humidity range:</b>	10 to 100%RH
<b>Divisions:</b>	0.5°C
<b>Accuracy:</b>	+/-1°C
<b>Glass filling:</b>	Kerosene
<b>CE/ROHS/WEEE:</b>	N/A
<b>Hazard information (SDS):</b>	See <a href="http://brannan.co.uk">brannan.co.uk</a> for information
<b>Casing material:</b>	ABS
<b>Product dimensions :</b>	Net: (closed) 37mm x 210mm x 16mm Gross: 42mm x 216mm x 23mm
<b>Product weight:</b>	Net: 69.5g Display box: 11g Gross: 81g



Description	Barcode	Product no
Compact sling psychrometer	5 011405 136077	13/607/2
Replacement tube	n/a	13/605/2